


BASE SHOES

Base shoes are used at the bottom of baseboards to cover gaps and/or imperfections. They are also used to add detail and thickness to baseboards. (See illustration on this page). FRENCH 479 BASHA 3/4 X 3/4 ALTON 1/2 X 3/4 642 AESOP 3/4 X 3/4 458 THOMAS 1/2 X 1 FO

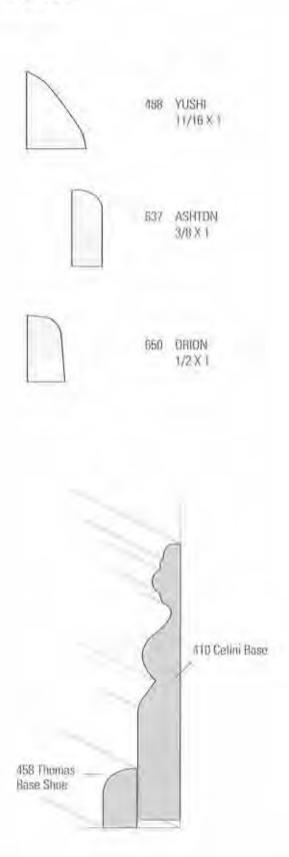



CASINGS

Casings are used to fra	me windows and doors.			
The casing section contains only			246	BABY BRANDYWINE
(See illustration on page 21).			FOM	11/16 X 2
940	SMYTH 9/16 X 1 7/16		163	PULLMAN III 11/16 X 2 1/8
553 FOM	BABY BRANDYWINE 1/2 X 1 1/2		250	BATISTA 9/16 X 2 1/8
			296 F	HESTER I
800	BABY BRANDYWINE 9/16 X 1 9/16			11/16 X 2 1/8
190	COGNAC		678	BURGESS 1/2 X 2 3/16
180	11/16 X 1 5/8		251	DUCHESS 9/16 X 2 1/4
736	POPPEA 11/16 X 1 5/8		661	BLAINE 5/8 X Z 1/4
845	HESTER II 9/16 X I 5/8		774	HYLAND 1/2 X 2 1/4
854	PULLMAN IV 11/16 X 1 5/8		842	LEPRINO 11/16 X 2 1/4
157	PULLMAN II 11/16 X 1 3/4		878	JASON 9/16 X 2 1/4
240	BABY BRANDYWINE 9/16 X 1 3/4		970	LANE 1/2 X 2 1/4
358	KYOTO 11/16 X 1 3/4		364	PATINO 11/16 X 2 5/16
		IIIu	strati	ons are 3/4 Scale

847	BONN 9/16 X 2 5/16	945	ARBUCKLE 11/16 X 2 1/2
631 F	ARGUS 11/16 X 2 3/8	346	SNOBIRD 11/16 X 2 5/8
008	ALISON 11/16 X 2 1/2	635 F	BRISBANE 11/16 X 2 3/4
061 FOM	BRANDYWINE 11/16 X 2 1/2	556	TANYA
115 F	PULLMAN 11/16 X Z 1/2	nga	5/8 X 3
165	CALYPSO	893	GILFORD 9/16 X 3
	11/16 X 2 1/2	700	MUNICH 5/8 X 3 1/4
317 FOM	ODYSSEY 11/16 X 2 1/2	882	PALMER 9/16 X 3 1/4
643	ALADDIN 9/16 X 2 1/2	942	BARTLOW 7/8 X 3 1/4
706	SUSAN 11/16 X 2 1/2	1012	CORVALLIS 9/16 X 3 1/4
724	SANITA 11/16 X 2 1/2	387	KUSHITE
817	GWEMES 1/2 X 2 1/2		7/8 X 3 5/16
884	GETTY 9/16 X 2 1/2	718	OTIS 5/8 X 3 3/8
921	VAUGHN 5/8 X 2 1/2	001	ELIZABETH 11/16 X 3 1/2
922	NORWAY 11/16 X 2 1/2	009 F	ALISON 11/16 X 3 1/2

